


AHP5

HEATER PAD INSTALLATION AND SPECIFICATION

12 VAC /12VDC

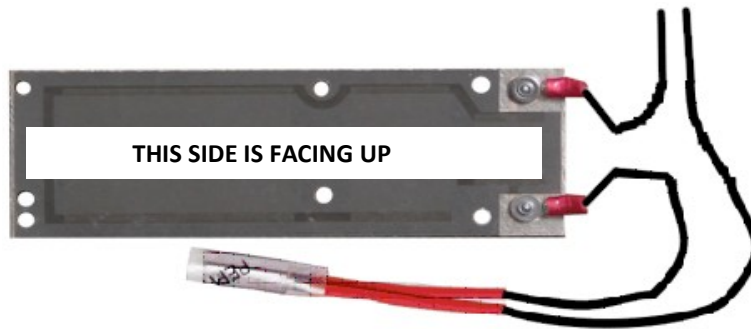

Specifications: 12 VAC/12VDC 10 Watts, 55 °F

Installation (Factory Pre-installed)

1. Turn the system power OFF.
2. Connect the AHP5 as shown above, polarity not important.
3. Turn the power On.

Installation (Factory NOT Pre-Installed)

1. Turn the system OFF.
2. Install the heater pad behind the LCD screen (see picture). Provide 1/4" clearance from the back of the LCD. WARNING: Do not install the heater pad on top of the LCD without a clearance, It may damage the LCD.
3. Install duct tape on the LCD's ribbon cable (not supplied)
4. Connect the AHP5 as shown above, polarity not important.
5. Turn the system power ON.

CHECK THE FOLLOWING AFTER TURNING ON THE HEATER PAD

- INPUT VOLTAGE MUST BE 12.5VAC-13.5VAC UNDER LOAD IF 12VAC 40VA TRANSFORMER IS USED.
- INPUT VOLTAGE MUST BE 13.6VDC-14.5VDC UNDER LOAD IF 12VDC 3.0A TRANSFORMER IS USED.

Separate power must be used if the under load voltage is low.

PACH AND CO INC.
San Clemente, California

1-888-678-7224
949-498-2951
www.pach-co.com