

# **User Manual**

# GemView® 7 Tablet Display TD-LBK070VA-USB-R



Copyright © 2022 Topaz Systems Inc. All rights reserved.





# **Table of Contents**

Compliant Information Important Safety Instructions		
Copyright Information	7	
Introduction	8	
Packing List	8	
Product Overview	g	
Front and Side View9 Intera	ctive Electromagnetic Pen	
Rear View9		
Installation	10	
Connect Tablet Display to PC	10	
Connect Pen to Tablet Display	11	
Install DisplayLink Driver	11	
Configure Tablet Display for Installation	11	
Install GemView Tablet Display Driver		
Configure Tablet Display for Pen Input	13	
Install Second Tablet Display and Configure for Clone Opedefined.	eration Error! Bookmark not	
Install Bundled Topaz Software	15	
Troubleshooting	16	
Screen Problems	16	
Problems with the Electromagnetic Pen		
Product Specification	17	
Screen	17	
Interactive Electromagnetic Pen	18	





# **Table of Contents**

Appendix	19
Replace the Pen Tip	19



#### **Compliant Information**

This device complies with part 15 of FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy, and if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Warning: You are cautioned that changes or modifications not expressly approved by the party responsible for compliance could void your authority to operate the equipment.

#### **CE Conformity for European Countries**

The device complies with the EMC Directive 2004/108/EC and Low Voltage Directive 2006/95/EC.

#### Following information is only for EU-member states:

The mark shown to the right is in compliance with the Waste Electrical and Electronic Equipment Directive 2012/19/EU (WEEE). The mark indicates the requirement NOT to dispose the equipment as unsorted municipal waste, but use the return and collection systems according to local law.



If the batteries, accumulators and button cells included with this equipment, display the chemical symbol Hg, Cd, or Pb, then it means that the battery has a heavy metal content of more than 0.0005% Mercury or more than, 0.002% Cadmium, or more than 0.004% Lead.





## **Important Safety Instructions**

- 1. DO NOT place objects on top of the device, as objects may scratch the screen.
- 2. DO NOT expose the device to dirty or dusty environments.
- 3. DO NOT place the device on an uneven or unstable surface.
- 4. DO NOT insert any foreign objects into the device.
- 5. DO NOT expose the device to strong magnetic or electrical field.
- 6. DO NOT expose the device to direct sunlight as it can damage the LCD Screen. Keep it away from heat sources.
- 7. DO NOT use the device in the rain.
- 8. Please check with your Local Authority or retailer for proper disposal of electronic products.
- 9. The device may produce some heat during normal operation or charging. To prevent discomfort or injury from heat exposure, DO NOT leave the device on your lap.
- 10. POWER INPUT RATING: Refer to the rating label on the device. Only use accessories specified by the manufacturer.
- 11. DO NOT use any sharp object to tap the screen.
- 12. Clean the touch screen with a soft cloth. If needed, dampen the cloth slightly before cleaning. Never use abrasives or cleaning solutions.
- 13. Disconnect the device from an electrical outlet and power off before cleaning the device.
- 14. DO NOT disassemble the device. Only a certified service technician should perform repair.
- 15. Users have to use the connection to USB interfaces with USB 2.0 version or higher



## **Declaration of RoHS2 Compliance**

This product has been designed and manufactured in compliance with Directive 2011/65/EU of the European Parliament and the Council on restriction of the use of certain hazardous substances in electrical and electronic equipment (RoHS2 Directive) and is deemed to comply with the maximum concentration values issued by the European Technical Adaptation Committee (TAC) as shown below:

Substance	Proposed Maximum Concentration	Actual Concentration
Lead (Pb)	0.1%	< 0.1%
Mercury (Hg)	0.1%	< 0.1%
Cadmium (Cd)	0.01%	< 0.01%
Hexavalent Chromium (Cr6+)	0.1%	< 0.1%
Polybrominated biphenyls (PBB)	0.1%	< 0.1%
Polybrominated diphenyl ethers (PBDE)	0.1%	< 0.1%

Certain components of products as stated above are exempted under the Annex III of the RoHS2 Directives as noted below: Examples of exempted components are:

- 1. Mercury in cold cathode fluorescent lamps and external electrode fluorescent lamps (CCFL and EEFL) for special purposes not exceeding (per lamp):
  - (1) Short length (≦500 mm): maximum 3.5 mg per lamp.
  - (2) Medium length (> 500 mm and  $\le$ 1,500 mm): maximum 5 mg per lamp.
  - (3) Long length (> 1,500 mm): maximum 13 mg per lamp.
- 2. Lead in glass of cathode ray tubes.
- 3. Lead in glass of fluorescent tubes not exceeding 0.2% by weight.
- 4. Lead as an alloying element in aluminum containing up to 0.4% lead by weight.
- 5. Copper alloy containing up to 4% lead by weight.
- 6. Lead in high melting temperature type solders (i.e. lead-based alloys containing 85% by weight or more lead).
- Electrical and electronic components containing lead in a glass or ceramic other than dielectric ceramic in capacitors, e.g. piezoelectronic devices, or in a glass or ceramic matrix compound.



# **Copyright Information**

Disclaimer: Topaz Systems, Inc. shall not be liable for technical or editorial errors or omissions contained herein; nor for incidental or consequential damages resulting from furnishing this material, or the performance or use of this product.

In the interest of continuing product improvement, Topaz Systems, Inc. reserves the right to change product specifications without notice. Information in this document may change without notice.

No part of this document may be copied, reproduced, or transmitted by any means, for any purpose without prior written permission from Topaz Systems, Inc.



# Introduction

# **Packing List**

After unpacking, please confirm whether the following contents are included:


- Tablet display
- USB 2.0 cable
- Electromagnetic pen
- Pen tether
- 3 pen tips
- Pen tip replacement tool
- Installation instructions

For any part flaws or defects, please consult the original product dealer.




## **Product Overview**

#### Front and Side View

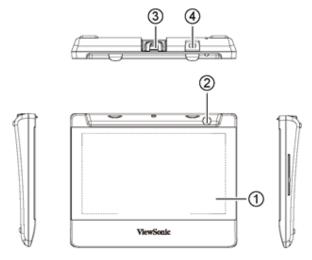

- 1. Display and electromagnetic pen touch area
- 2. Pen holder
- 3. USB connector
- 4. Kensington lock slot

#### Rear View

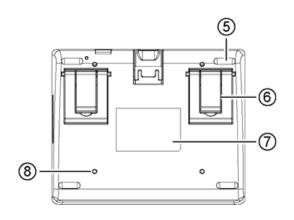

- 5. Rubber foot pad (x4)
- 6. Large and small supports (x2), can be extended and retracted
- 7. Product label
- 8. VESA mount holes (x4)

**Note:** Please don't open the enclosure; **contact Topaz service** for any problem.

#### Interactive Electromagnetic Pen

The interactive electromagnetic pen is made with electromagnetic resonance technology and does not require batteries.



## Installation

# **Connect Tablet Display to PC**

Connect the tablet display to the PC using the USB cable, as shown below.



#### Notes:

- Connect both USB connectors at one end of the cable to the PC, to ensure a stable power supply. Due to the manner that Windows enumerates USB devices and the use of internal USB hubs in some PCs, it may be necessary to change the ports into which the USB connectors are inserted.
- To open the USB cover on the back of the tablet display, press on the tab (highlighted in red) with your forefinger, then lift the cover with your thumb.





# **Connect Pen to Tablet Display**

If your pen is not already connected to the tablet display, follow these instructions:

- 1. Loop one end of the pen tether through the eye at the end of the pen.
- 2. Loop the other end of the pen tether through the tether hole located above the USB cover.
- 3. Note that the pen can lie flat in the pen holder slot, or it can stand vertically in the hole at the right end of the pen holder slot.

#### **Install DisplayLink Driver**

Download and run the DisplayLink installer for use on Windows clients from the Topaz website: <a href="https://www.topazsystems.com/software.html?tab=gemview-software-tab">www.topazsystems.com/software.html?tab=gemview-software-tab</a>.

For silent installation, use the command -silent. For more information, view: <a href="https://support.displaylink.com/knowledgebase/articles/544789-installation-switches-for-installing-displaylink-s">https://support.displaylink.com/knowledgebase/articles/544789-installation-switches-for-installing-displaylink-s</a>.

# **Configure Tablet Display for Installation**


Use the Display program in the control panel to configure the tablet display for your installation (see screenshot below). You may specify the following characteristics:

- 1. **Resolution:** Use the recommended resolution
- 2. **Orientation:** Landscape or portrait
- 3. **Multiple displays:** Extend these displays
- 4. **Alignment:** Make sure that the bottoms of the monitors are aligned as shown below, and that the tablet display (Display 2) is on the side of the main display you want to use when moving windows from the main display (Display 1).



After configuring the tablet display, you may test it as follows:

- 1. Click the identify button; the number 1 should appear on the main display and the number 2 should appear on the tablet display.
- 2. Move your mouse from the main display to the tablet display; it should track properly.
- 3. Move a window from the main display to the tablet display; it should appear normally and respond to mouse interactions.

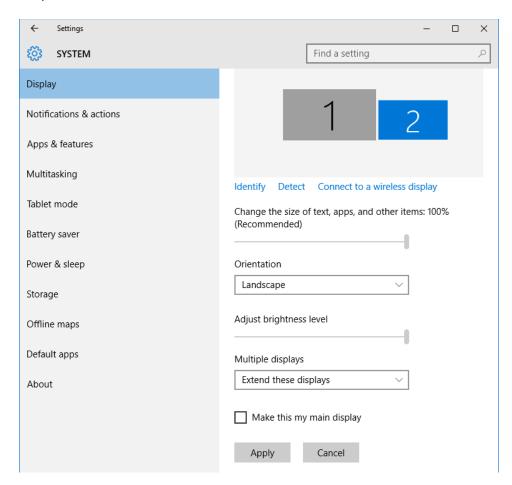



#### **Install GemView Tablet Display Driver**

Note: If you are using your computer in a Citrix environment, please refer to the document <u>GemView Tablet Displays in Citrix XenDesktop Environments</u>. If you are using your computer in VMWare Horizon environment, please refer to the document <u>GemView Tablet Displays in VMWare Horizon Environments</u>. These guides will provide setup and configuration instructions.

Download and run the GemView installer from the Topaz website: www.topazsystems.com/software/download/gemview.exe.

**Note:** You must reboot your PC after the installation completes. This software provides pen input functionality for the tablet display.


For silent installation, see the commands below:

- 1. Silent install: Gemview.exe /s -sps
- 2. Silent uninstall: Run as administrator \Windows\rmtablet.exe KNLH

# **Configure Tablet Display for Pen Input**


1. In All Apps or All Programs, under GemView Tablet Display Manager, click on Tablet Display Manager. In the Tablet Display Properties window that opens, notice that the Pen tab is selected. Write on the GemView Tablet Display with the pen and the current pressure will show as a green bar. Adjust the tip feel slider between soft and firm to select the pressure desired. The default setting is recommended for standard use.

**Note:** The box marked "Use Windows Ink" is checked by default. Some legacy programs or older OS may expect mouse data instead. If so, please uncheck "Use Windows Ink".

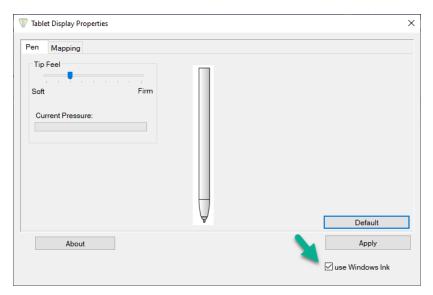



2. Click the Mapping tab to display the screen below. Select the number of the tablet display from the drop down list. The numbering of the monitors follows that in the Windows display settings. Select the orientation of the tablet display. It should be the same orientation selected in the Windows display screen.

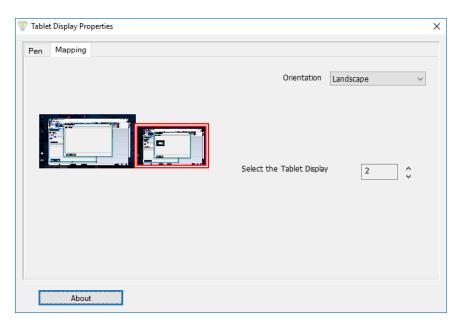

3. Click the About button to see information about the versions of the software driver, the hardware, and the firmware.





## **Install Bundled Topaz Software**

Topaz Systems provides software designed specifically to take advantage of the GemView Tablet Displays' large format, pen input capabilities. For detailed information on pDoc Signer<sup>®</sup>, pDoc<sup>®</sup> Signer Duo, pDoc Pro, and other software packages and drivers, visit www.topazsystems.com/gemview-software.html.

These software packages use the GemView Tablet Displays to provide the following functions:

- 1. Display full-page or half-page document images
- 2. Sign digital signature fields with the electronic pen
- 3. Fill in form fields (check radio buttons and check boxes, select items from lists, enter text into text boxes using the on-screen keyboard)
- 4. Place comments on pages and enter text using the on-screen keyboard
- 5. Draw diagrams or write text onto a document page
- 6. Place stamps onto a document page
- 7. Navigate among the pages in a document
- 8. Zoom document pages in and out



# **Troubleshooting**

## **Screen Problems**

Problems	Recommended actions
No picture	<ul> <li>Check whether USB cables at computer end and screen end are connected properly.</li> <li>Try using another USB interface on the computer.</li> <li>Confirm whether the computer is in sleep mode. Press the keyboard or move the mouse, and reboot the system.</li> <li>Try to adjust the brightness.</li> <li>Confirm whether the computer is starting up.</li> <li>With a laptop, confirm whether the outer-link (RGB) output is selected.</li> <li>Check if the driver is installed.</li> </ul>
Image noise	Other electrical devices may trigger electrical disturbances.
Image blur	Using the original resolution of 1024 x 600 may provide the optimum quality.

**Note:** Do not open the enclosure. For assistance, **contact Topaz**.

# **Problems with the Electromagnetic Pen**

Problems	Recommended actions
Electromagnetic pen does not work	<ul> <li>Try to confirm by mouse operation. If the mouse does not work, reboot the computer or the application.</li> <li>Try to reinstall the GemView driver.</li> </ul>
Pen tip is too short	Replace the pen tip (see Appendix).
Abnormal cursor movement	<ul> <li>Remove the disturbances caused by adjacent electrical devices.</li> <li>Try to reboot the computer to confirm.</li> <li>Confirm both ends of USB cable are connected to the PC.</li> </ul>



# **Product Specification**

# Screen

Display	
Model	7 inch TFT LCD, LED backlight
Resolution	1024 x 600
Brightness	200 cd/m <sup>2</sup> (typical)
Angle of Visibility	Horizontal 120°, vertical 80°
Response Time	Tr+Tf: 25ms (typical)
Connector	
USB	USB x1
Power Supply	
Input	DC5V/1A, USB power supply
Power Consumption	Start-up 5W, sleep < 1.0W
Body	
Equipment Dimension	180mm x 145mm x 23mm
Equipment Weight	Net weight: 0.34 kg, total weight: 0.7 kg
Environment	
Temperature Range	Operation: 0°C ~ +40°C; Storage: -20°C ~ +60°C

Operation: 20% ~ 80%; Storage: 10% ~ 90%

Relative Humidity



# **Interactive Electromagnetic Pen**

Model	
Technique	Electromagnetic
Action Area	Full screen

Technical Specifications	
Resolution	5080 LPI (lines per inch)
Tracking Velocity	200 PPS (dots per second)
Pressure Sensing	2048 Levels
Accuracy Rating	± 0.5mm (center), ± 1mm (edges and corners)
Readable Height	5-15mm

Electromagnetic Pen	
Model	Pressure sensing, wireless
Inclination of Detectable Pressure Sensitive Pen	Inclination range: ± 45°
Pen Tip	Replaceable

**Note:** The specification is subject to change without prior notice.



# **Appendix**

# **Replace the Pen Tip**

- 1. Remove the pen tip from the electromagnetic pen using the supplied tool.
- 2. Insert the new pen tip into the pen and then push in the pen tip until it does not move.

